

Procedure of GY-HC900 firmware update

Preparation

Copy “PRIVATE” folder including the latest (V0230) firmware program (**.UPD) to prepared SD card (Update media) .


Folder Structure : PRIVATE/JVC/GY-HC900/*****.UPD

Do not leave other file(s) than “/*****.UPD “


Procedure

1. Start from the status of Power OFF. Put the cap on the Lens (mount).
2. Push and hold “ONLINE/5” button and “CAM MEDIA” button simultaneously and put the camera Power ON . Keep on holding buttons until the Message 1 is displayed . (approx. 15sec)
3. Insert the SD card (update media) in Slot B ,and update starts automatically. It takes about 5min to complete update. “Firmware Update Complete” (Message2) message is displayed (approx. 5 min)
4. Remove the SD card
5. Remove battery and AC adapter and put the Power OFF.
6. Re-connect AC adapter or Battery.
7. Put the power On and Diagnosing procedure starts after pushing “ Enter” (approx. 6 min) Lens cap should be put on during diagnosing. After push “close” of “Complete Diagnosis” Message3 ,Check Firmware version V0230-0127
Menu>System>System Information : Version “ 0230-0127”

Note: Use AC adapter to feed the power during update process to avoid failure of the camera due to running off the battery .

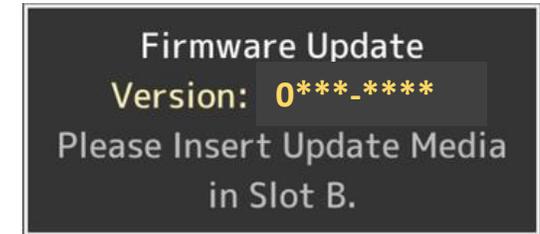

Message1

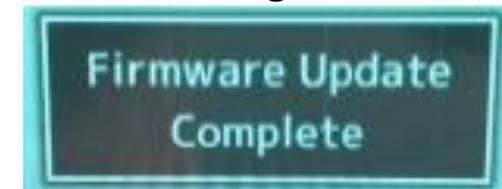

Message2



Message3